

I-PRO 4

USER MANUAL



INDEX

CHAPTER 1. INTRODUCTION	5
CHAPTER 2. CIRCUMSTANCES	5
A) CAUTIONS BEFORE USE	5
B) PC REQUIREMENTS	5
CHAPTER 3. INSTALLATION	6
A) SOFTWARE INSTALLATION	6
CHAPTER 4. EXECUTING I-PRO 4	9
A) EXECUTING I-PRO WITH I-PRO ICON	9
B) EXECUTING I-PRO WITH PROGRAM MENU	9
C) EXECUTE I-PRO WITH U-POINTER/U-VISION MENU	10
CHAPTER 5. SCREEN CONSTITUTION AND MAIN FUNCTIONS	11
A) TYPE OF TOOLBAR	11
B) TOOLBAR TYPE AND POSITION	11
C) FLOATING TOOLBAR	11
D) DESCRIPTION OF TOOLS IN FLOATING TOOLBAR	13
1. BROWSING MAIN MENU	13
2. SELECTING COLOR AND PEN THICKNESS	13
3. SWITCHING FUNCTION	14
4. CHOOSE A TRANSPARENT MODE, PEN AND DIAGRAM	15
5. CREATING A NOTE	17
6. PAGE UP/DOWN	17
7. MAGNIFYING	17
8. RECORDING	18

9. ERASER TOOL	18
E) DESCRIPTION OF FIXED TOOLBAR	19
1. BROWSING MAIN MENU	19
2. CREATING A NOTE	19
3. CHOOSE A COLOR	20
4. PEN THICKNESS CONTROL	21
5. TRANSPARENT MODE	21
6. SELECT PEN OR DIAGRAM	21
7. CHOOSE AN ERASER	22
8. PAGE UP/ DOWN AND NOTE LIST.....	22
9. MAGNIFYING	23
10. RECORNING	23
11. SWITCHING TO WINDOWS MODE	23
12. OBJECTS CONTROL MODE	24
CHAPTER 6. APPLICATIONS	24
A) IMPORTING DOCUMENTS	24
B) APPLICATION OF CLIP ART	26
C) NOTE LIST AND DELETE	28
D) SAVE AND PRINT A NOTE	30
1. SAVE NOTE	30
2. PRINT NOTE	30
E) SAVE AND OPEN	31
F) OBJECT	32
G) USE AN ERASER FUNCTION	34
CHAPTER 7. EXTRA FUNCTIONS	35

A) VIRTUAL KEYBOARD	35
B) SPOT LIGHT	35
C) BLIND	37
CHAPTER 8. CONFIGURATION	38
A) FOLDER	38
B) NOTE	39
C) DUAL DISPLAY	39
D) RECORDING	40
E) VOLUME.....	41
F) OPTION	41
G) VERSION INFORMATION	42
CHAPTER 9. UNINSTALL I-PRO	43
A) UNINSTALL I-PRO USING WINDOWS PROGRAM MENU	43
B) UNINSTALL I-PRO USING CONTROL PANEL OW WINDOWS	43
CHAPTER 10. NOTICE	43

CHAPTER 1. INTRODUCTION

i-Pro is board software optimized to U-Pointer/U-Vision. You will have more effective lecture with delicate writing and various convenient tools of i-Pro and U-Pointer/U-Vision. i-Pro has two representative features.

- Digital Writing Function
- Contents Authoring Function

i-Pro provides fast and stable writing speed as it optimized to U-Pointer/U-Vision. Enjoy powerful presentation, education and contents authoring with i-Pro.



CHAPTER 2. CIRCUMSTANCES

A) CAUTIONS BEFORE USE

i-Pro supports Windows XP and Vista, and other OS, Mac, Lynux are not supported. It is also operated with U-Pointer/UVision.

Necessarily, execute this program with U-Pointer/U-Vision. (i-Pro is executed only when U-Pointer/U-Vision is run in your PC. Please, execute U-Pointer/U-Vision prior to run i-Pro.)

B) PC REQUIREMENTS

	Minimum requirement	Recommended Requirement
CPU	Pentium 4, 1GHz	Dual Core
RAM	512M Byte	1G Byte
HDD	70M Byte	100M Byte
Graphic Card	128M Byte	128M Byte
OS	Windows XP, Vista, 7	Windows XP, Vista, 7
Others	Microphone, Speaker	Microphone, Speaker

CHAPTER 3. INSTALLATION

A) SOFTWARE INSTALLATION

Insert CD that came with U-Pointer/U-Vision into CD-ROM drive and click 'install i-Pro', and then please, select the installation language.



- Installation Wizard pops up and click 'next'.

 


At additional function application, click one of the blanks for creating an icon. Then click 'next'.


- In this stage, you can create desktop icon or quick launch icon. Select on your preference and click 'Next'.




- Now, it is ready to install i-Pro. Click 'installation' menu.

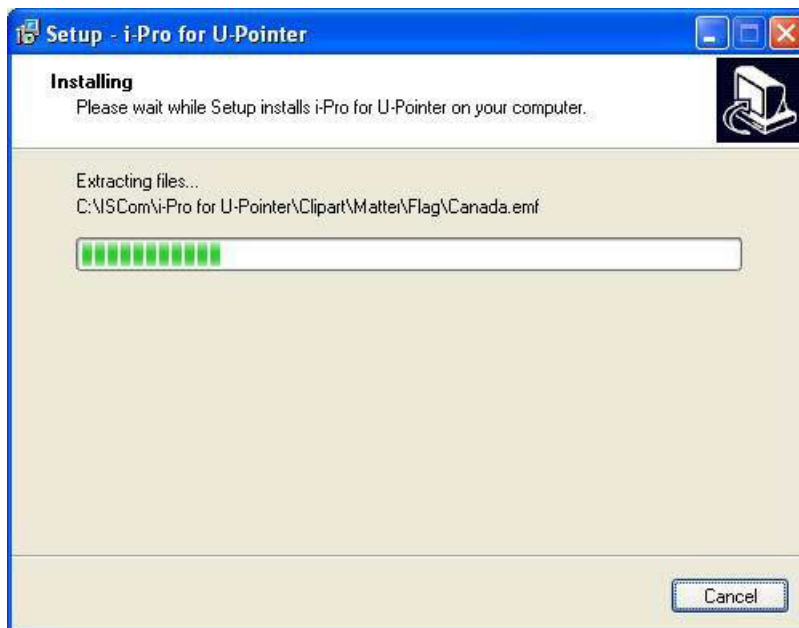

 - Install i-Pro Printer clicking 'next'.

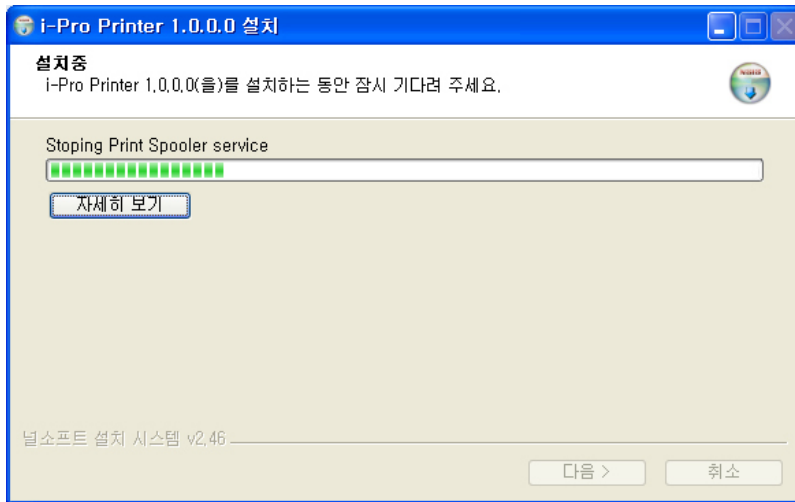

 - i-Pro Printer installation was completed. Please click the 'Finish button'.

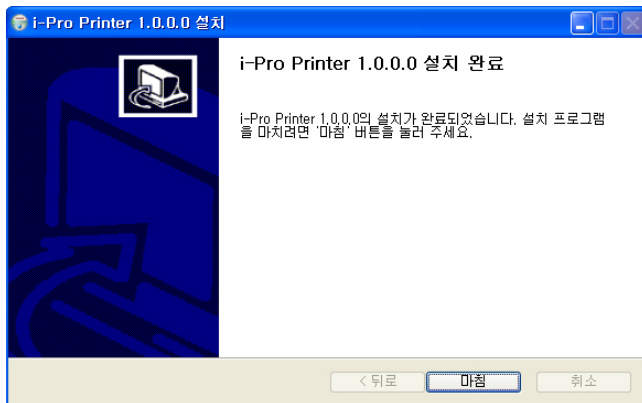

- The installation is completed. Click 'Finish'. If you want to finish installation and execute i-Pro at once, then click 'Launch i-Pro' and 'Finish'.




CHAPTER 4. EXECUTING I-PRO

Notice: Execute U-Pointer/U-Vision prior to run i-Pro. If you execute i-Pro before U-Pointer/U-Vision, an error message is pop up and i-Pro will not work.

A) EXECUTING I-PRO WITH I-PRO ICON

 
If you select 'Create a desktop icon' or, 'Create a quick launch icon' during installation, i-Pro icon is created on background or quick launch tray. You may execute the i-Pro by clicking one of these icons.

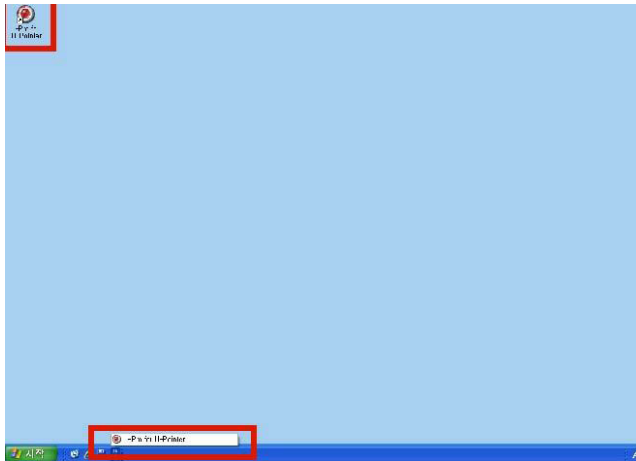

B) EXECUTING I-PRO WITH PROGRAM MENU


- In case that the i-Pro icon is removed in windows background or you did not select 'Create a desktop icon' and 'Create a quick launch icon' during installation, you can execute the i-Pro through program menu. Follow the instructions below.

 - Click the ,start' button on window task bar.
- Click 'all programs'.
- Click ,ISCom' in the browsed program menu.
- Click 'i-Pro4' menu.
- i-Pro menu will be browsed and click i-Pro icon and then i-Pro will be executed.

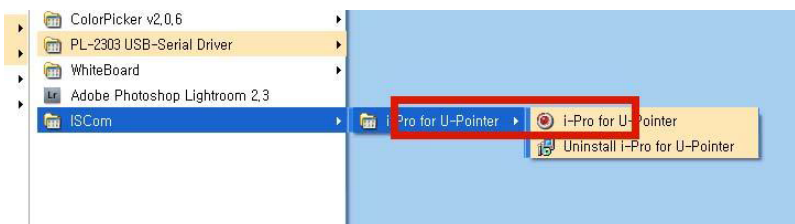

C) EXECUTE I-PRO WITH U-POINTER/U-VISION MENU

 • i-Pro can be executed by clicking i-Pro icon in U-Pointer/U-Vision menu. When U-Pointer/U-Vision is executed, U-Pointer/U-Vision icon is created on windows taskbar tray. Click U-Pointer/U-Vision icon with U-Pointer/U-Vision pen, and U-Pointer/U-Vision menu will be browsed. In the menu you can find i-Pro icon and click it. I-Pro will be executed.

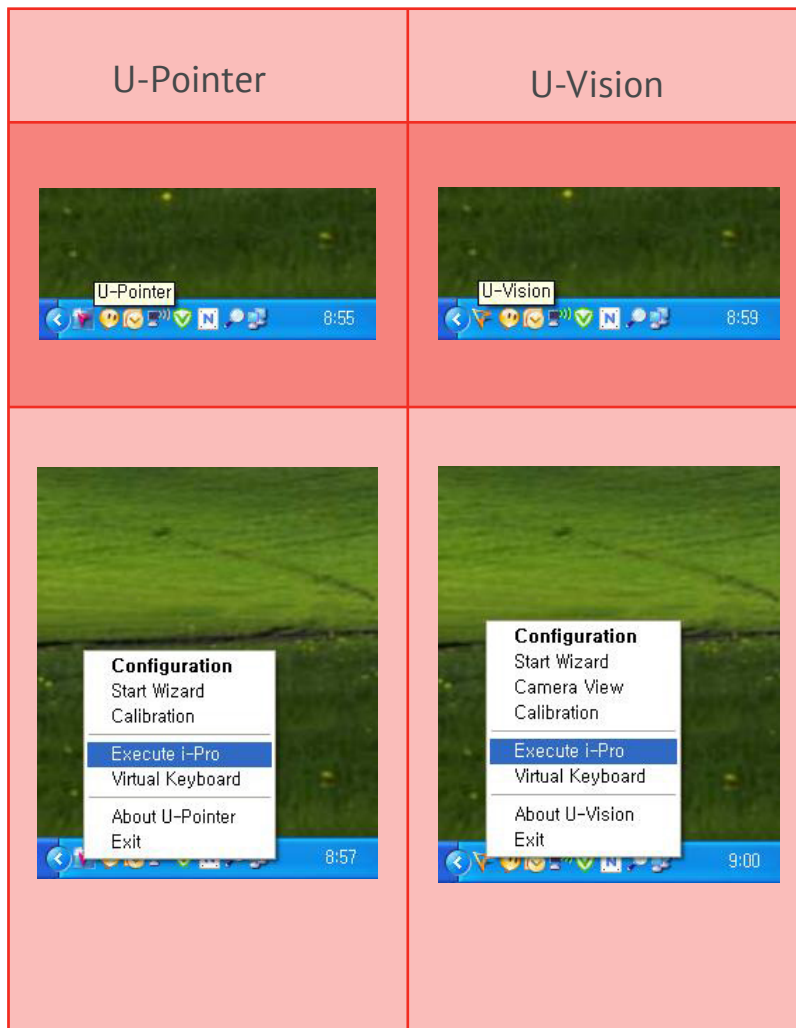

CHAPTER 5. SCREEN CONSTITUTION AND MAIN FUNCTIONS

A) TYPE OF TOOLBAR

Toolbar of i-Pro can be located any position according to user's preference. There are straight toolbar and floating toolbar. Straight toolbar can be located any side of window and floating toolbar can be floated to any position by the control of user. Toolbar type and position are selectable in the main menu of i-Pro and type&position of toolbar are stored when you quit i-Pro for next usage.

B) TOOLBAR TYPE AND POSITION





C) FLOATING TOOLBAR

Floating toolbar comprises 3 sections A, B, C and each section is connected hierarchically.

A section has two functions. The first function is to show current tool now in use. If you select Pen tool of object tool, proper icon will be displayed. The second function is to browse main menu of i-Pro. If you click right-button in this area, main menu will be created.

B section:

Tools and functions of i-Pro are grouped according to their similarity and in the B section, icon for grouped tools and functions are listed. During your usage, diagram, eraser and mode switching tool are frequently used. For your convenience, these function group can be switched only by clicking corresponding icon.

In C section, detail function and tools are displayed. When you click any icon in B section, corresponding icon appears in section C. If no, selection actions in C section during 5 seconds, C section will disappear.

D) DESCRIPTION OF TOOLS IN FLOATING TOOLBAR



1. Browsing Main Menu

To activate main menu on floating mode, press A section for seconds with an U-Pointer/U-Vision pen or click right button of a mouse.







2. Selecting Color and Pen thickness

When you click this icon, 16 kinds of color and 4 thickness of pen will be appeared in section C. Click color or pen thickness on your preference.



3. Switching Function

	<p>When you press this icon during your presentation using i-Pro, writing mode will be switched to windows mode so that you can run other application S/W of windows.</p>
	<p>In this mode, what you draw, clipart, or diagram can be treated as object. So you can rotate, enlarge, copy, paste the objects.</p>
	<p>You can use Pen and Mouse without switching mode specially.</p>
	<p>You can expand Note`s size without any limitation.</p>

4. Choose a Transparent Mode, Pen and Diagram













	When clicked, red underline is displayed and switched to transparent mode. In this mode, every new drawing is overlapped to background, diagram and drawings. so that you can see bottom drawings. If you release transparent mode, click the icon once more.
	Pen tools. You can select pen type.
	Brush-pen. You can express thickness according to writing-speed.
	Straight line
	Rectangular
	Rectangular filled with color
	Circle
	Circle filled with color
	Straight line with arrow both ends
	Straight line with one arrow end

5. Creating a Note



- Creating note, creating clipart, importing document, capturing screen functions are grouped in this icon.

	New note is created. Background color of note is set in 'configuration menu'.
	Chalkboard Background
	Music Note Background
	English Note Background
	Manuscript Note Background
	Graph Note Background
	Import any ordinary files
	Insert clipart into note
	Import every images available in P.C.
	Show Note List






6. Page Up/Down

Note Page Up and down. Activate only when two or more notes are created.

7. Magnifying

Magnifying selected note region or enlarge all note area to 100% to 400%. Size and position of All objects in the note varies according to magnifying ratio.



100%	Return to original note size
200%	Magnifying note to 200%
300%	Magnifying note to 300%
400%	Magnifying note to 400%
	Magnifying selected region. If you want to return to original size, click '100'
 	Magnifying and reducing the screen by each grade






8. Recording

What you written on the note during your lecture is recorded in movie file format.



9. Eraser Tool

Tools for erasing object in the note. Erase all and partly are supported.


	Erase all objects in the note
	Erase object selectively
	Erase Region: objects in selected region will be deleted

E) DESCRIPTION OF FIXED TOOLBAR

Toolbar can be positioned 4 sides of window, but shape and function are the same.

 - To activate main menu, press the i-Pro icon for seconds with U-Pointer/ U-Vision pen or click right button of PC mouse.



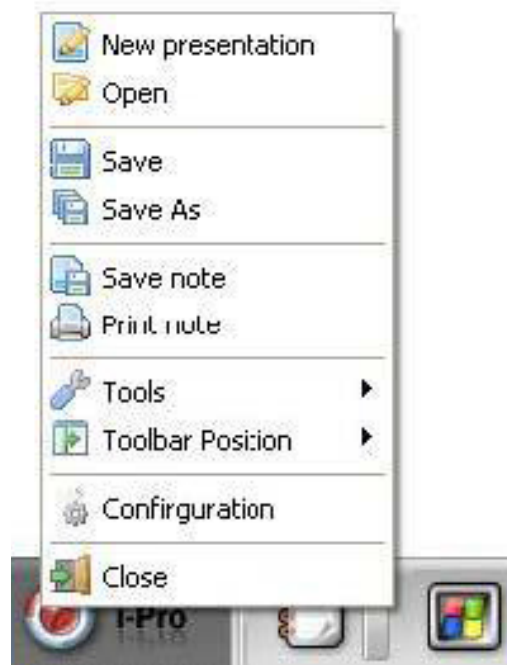








1. Browsing Main Menu



2. Creating a Note

Click the icon marked below for 0.3 second and opens the note creating function. To create a note (checked paper is default), click the icon shortly or the bar next to the icon.



	New note is created. Background color of note is set in 'configuration menu'
	Chalkboard Background
	Music Note Background
	English Note Background
	Manuscript Note Background
	Graph Note Background
	Import any ordinary files
	Insert clipart into note
	Import every images available in P.C.
	Show Note List
	Second menu option.

3. Choose a Color

Click the color icon or a color browsing bar next to the color icon, then color menu will be opened.



4. Pen thickness control

Click the pen thickness icon in the picture and then current pen thickness will appear. To control pen thickness, click pen thickness control icon next to pen thickness icon. Pen thickness control slide will appear and drag the slider.



5. Transparent mode

When clicked, normal writing mode is switched to transparent mode. In this mode, every new drawing is overlapped to background, diagram and drawings, so that you can see bottom drawings through upper drawing. If you want to release transparent mode, click the icon once more.













6. Select Pen or Diagram

Pen/diagram menu is browsed by two ways. The first is to press Pen Diagram icon for a while and the second is to click browser icon next to Pen/Diagram icon.



- You can select diagrams or pen in the browsed menu. When pen or diagrams are selected, selected icon appears in Pen/Diagram icon.

	Pen tools. You can select pen type.
	Brush-pen. You can express thickness according to writing-speed.
	Straight line
	Rectangular
	Rectangular filled with color
	Circle
	Circle filled with color
	Straight line with arrow both ends
	Straight line with one arrow end
	Second menu option.

7. Choose an Eraser

Press eraser icon for a while and then eraser sub menu will be appeared or clicking browser menu bar next to eraser icon do the same.



- After you select the type of eraser in sub menu, the selected eraser icon will appear in the eraser icon area.

	Erase all objects in the note
	Erase object selectively
	Erase Region: objects in selected region will be deleted
	Second menu option

8. Page Up/Down and Note list

Function to move previous or next page. This function is activated only when two or more notes are created.



	Move to previous note
	Move to next note
	Note list: in the note list window, you can open the wanted note by double clicking or delete note selectively.

9. Magnifying

Magnifying selected note region or enlarging all note area to 100% to 400%. Size and position of All objects in the note varies according to magnifying ratio.





10. Recording

What you written on the note during your lecture is recorded in movie file format in this mode. By means of this function, you can create lecture contents and make an on-line service.




Notice: Windows Media Encoder provided by Microsoft should be installed to your computer to use recording function of i-Pro

	Record start icon: when you click this icon, it becomes in-active mode for preventing double operation
	Record stop icon: This icon becomes activated only when recording is initiated

11. Switching to Windows Mode

 Not quitting i-Pro, you can switch to Windows mode and run other application programs.



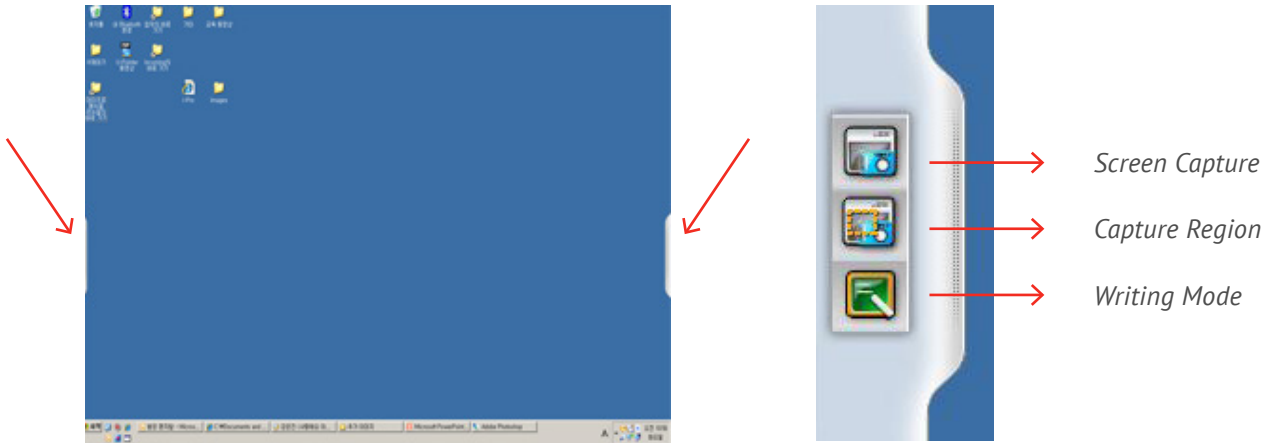


12. Objects control mode

In this mode, what you draw, clipart, or diagram can be treated as objects. So you can rotate, enlarge, copy and paste the objects.



 F) DESCRIPTION OF MAIN MENU

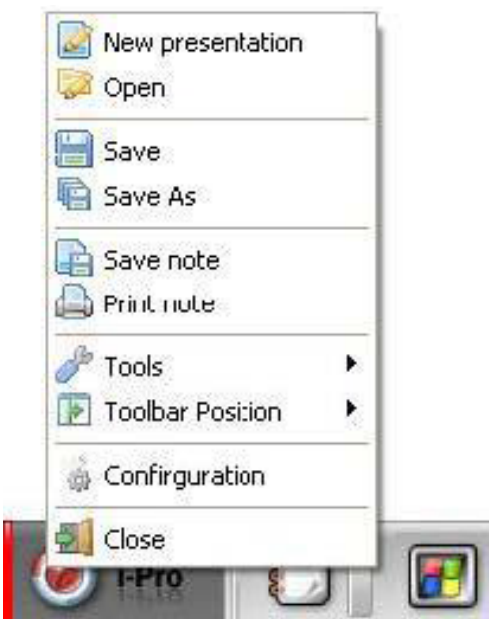


- **New Presentation:** Start new presentation
- **Open:** Open stored lecture notes
- **Save:** Save current presentation
- **Save as:** Save current note with designate name
- **Save note:** Save note in picture file format
- **Print note:** Print note
- **Tool:** selecting virtual keyboard, spotlight, blind
- **Toolbar Position:** selecting toolbar position in windows frame
- **Configuration:** setting configuration of i-Pro
- **Close:** finishing i-Pro

CHAPTER 6. APPLICATIONS


A) IMPORTING DOCUMENTS


i-Pro provides 5 kinds of backgrounds (refer to Chapter5. D-5., E-2.) for your convenience during presentation. In addition to this, default 350 numbers of clipart and your Microsoft Office Documents can be imported for your presentations. To import Microsoft office documents, follows the instructions here after.

 - a) As described in D-5. and E-2. of Chapter 5, click 'import documents'.
- b) A dialog box will be appeared as following and the file imported will be opened accordingly.

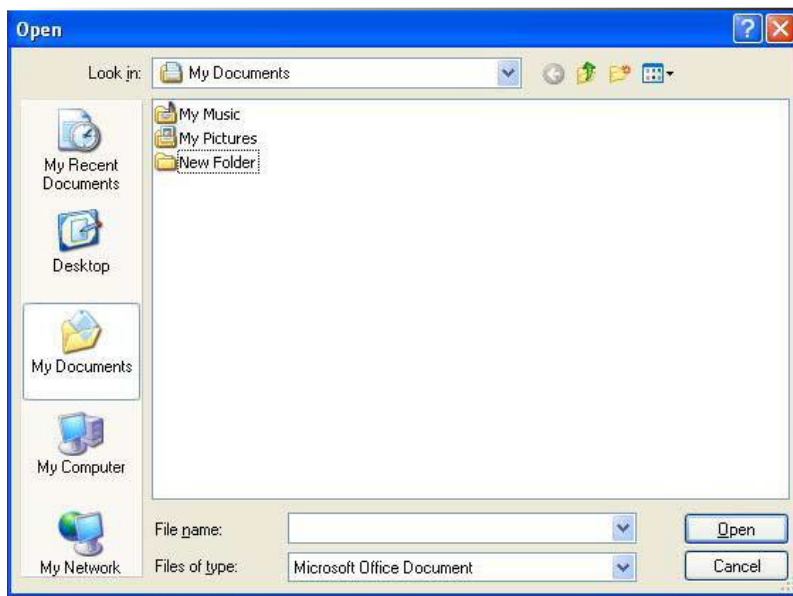

  - c) When the selected file opened, click 'print' in menu as you do print actually.
- d) Terminate 'every opened applications' after completing 'print'. Printer was set as i-Pro Printer automatically as photo as below when you use i-Pro, therefore, you can import every available documents regardless of Windows mode or Intelligent mode through printing in i-Pro Printer.

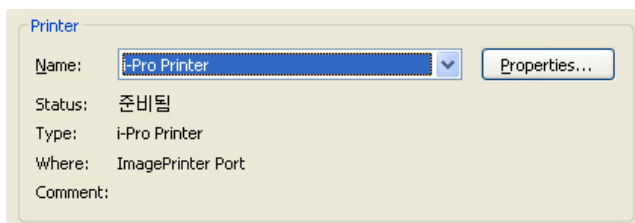

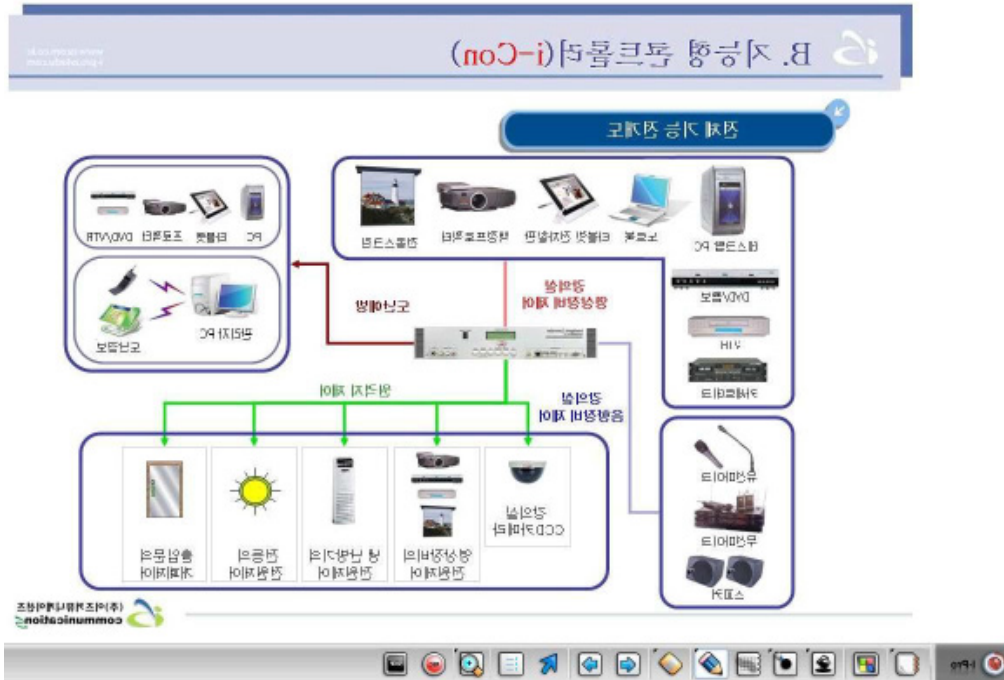

d) To import Microsoft office documents, Microsoft Office should necessarily in your PC and works properly. You can import “Office-Document” as well as “PDF file”.

 
B) APPLICATION OF CLIP ART

i-Pro provides 350 cliparts for your presentations and interface for adding user clipart. To use clipart, follow the instructions.

- Click the clipart icon [clipart icon]. Refer to [Chapter 5. D-5.](#) and [E-2.](#)
- Clipart dialog box is opened.
- Selecting clipart directory and then thumbnail of clipart is displayed on the right. If you click thumbnail, you can see magnified clipart in preview window.




d) Double click clipart or drag one of the clipart into note area and then clipart is inserted into the note.

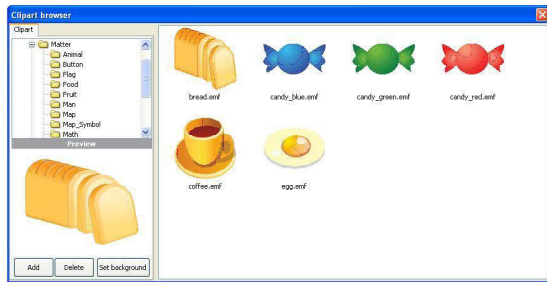

1 / 1



 
e) To set clip art as a background, select a clipart and click 'set background' button. Only one clipart can be designated as background for each note.

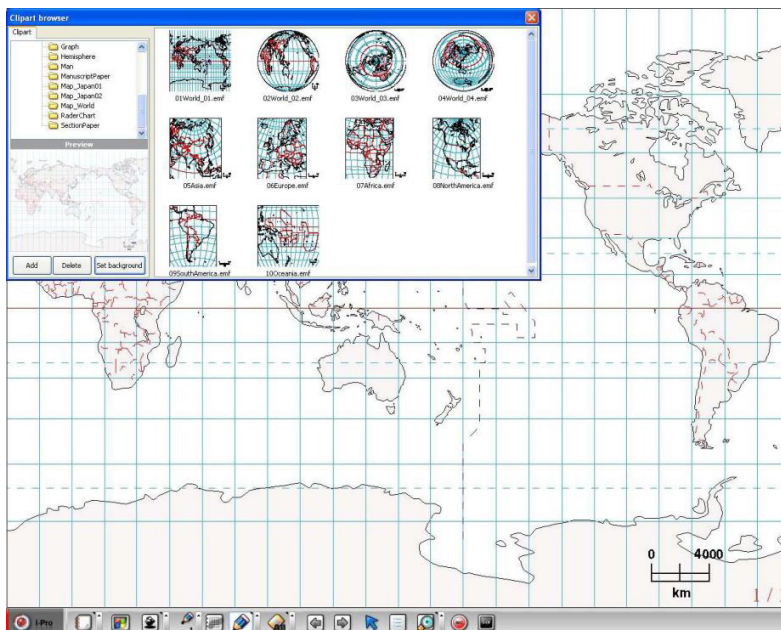

f) Adding clipart: Click 'Add' button to add user clipart to i-Pro clipart folder and then dialog box appears.



 g) Click Browser button [browser button icon] and then folder dialog box appears. Designating clipart folder and input clipart folder name. Click 'Confirm' button. Clipart folder is now created in the i-Pro clipart directory. Be sure sub folders of designated clipart folder is added to i-Pro clipart folder.

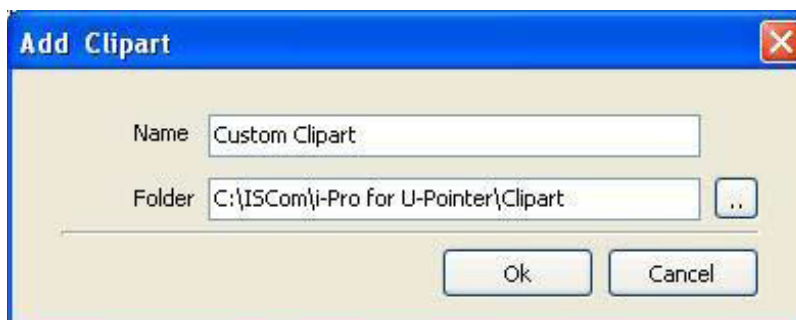


h) Added clipart folder is available until when you delete the clipart folder.


i) To remove the added clipart folder, select and click 'delete'. But, the clip art provided by i-Pro is not deleted.

C) NOTE LIST AND DELETE

 1. During presentation, number of notes are created or prepared lecture notes are used. You can check total number of notes and current page in the right lower region of note frame.

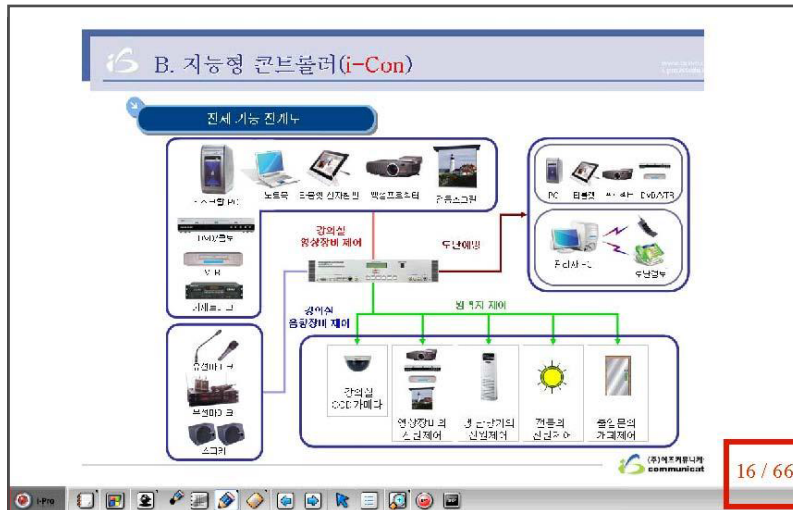

 2. Note List: As explained in Chapter5. D-5. and E-8, click and check all the notes created until now.

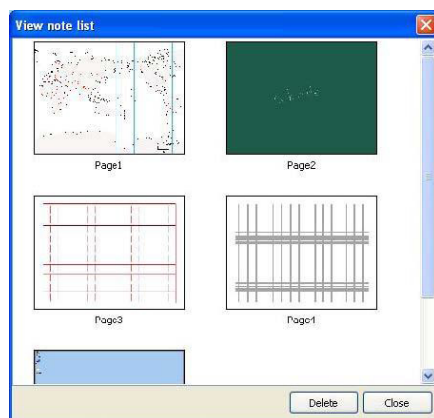

3. To move to selected note, double-click it with a U-Pointer/U-Vision pen or mouse.

 
4. To delete note, select note to be deleted and click „Delete” of the box.

5. To delete number of notes, use drag function of U-Pointer/U-Vision Pen or mouse. Drag a certain region so that the notes to be deleted are included in the region. Click 'Delete' button.

D) SAVE AND PRINT NOTE


1. Save Note

- a) Your presentation notes can be saved as picture file format. Click main menu and 'Save note'. Refer to Chapter 5. [F-1](#).
- b) Designate folder to be saved and input file name.
- c) Select picture file format and select current note or all.
- d) Click 'Confirm'.

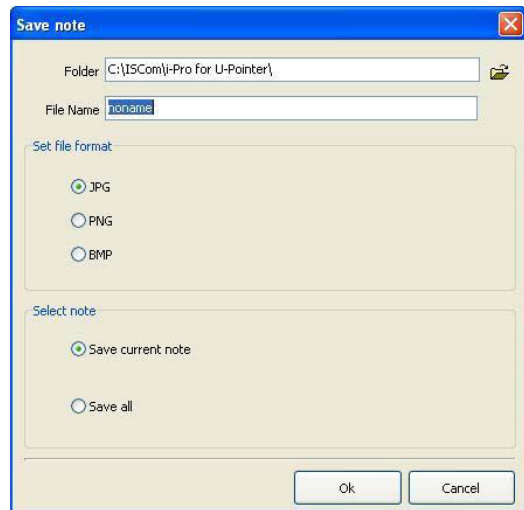

2. Print Note

 - a) Your presentation notes can be printed. Click main menu and „Print Note”. Refer to Chapter5. [F-1](#).
- b) Select printer connected to your computer.
- c) Choose notes to be printed. You can select current note, all notes and selected notes using print option.
- d) Click „Confirm”

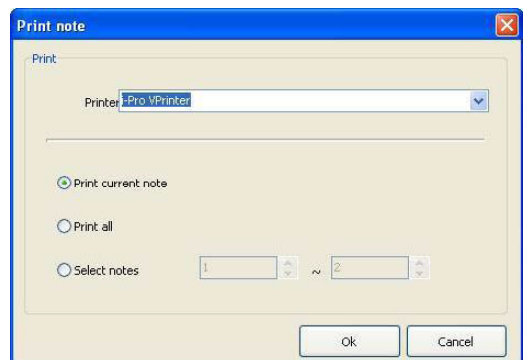


E) SAVE AND OPEN PRESENTATION


1. Your presentation is saved as a file and the file can be used for your other presentation using other PC. Only requirement of PC is that i-Pro is installed.

a) To save your presentation, click the 'save' in main menu. Refer Chapter5. [F-1](#).

 b) Dialog box will appear. In the dialog box, designate folder and input file name. Click 'Save', then file is saved on the folder in .istfile format.

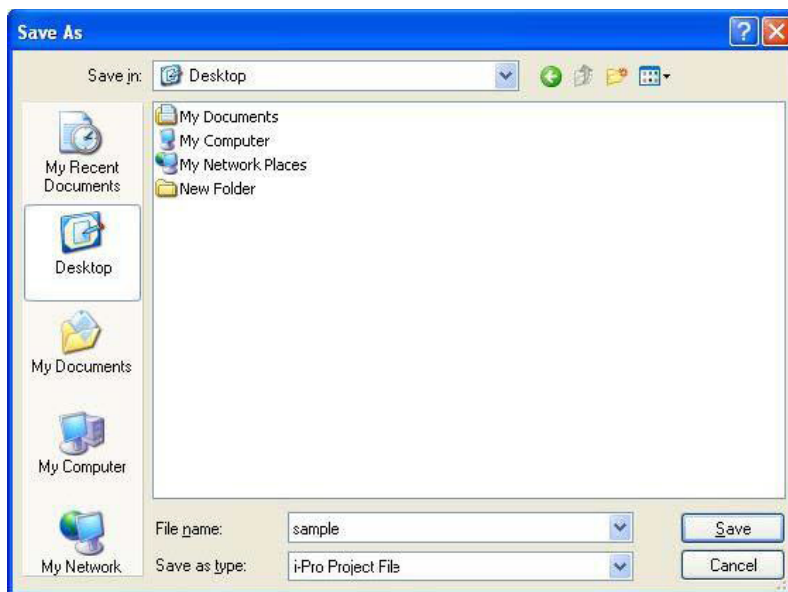

 c) Open the folder in which the presentation is saved. You can find the file with i-Pro file icon.

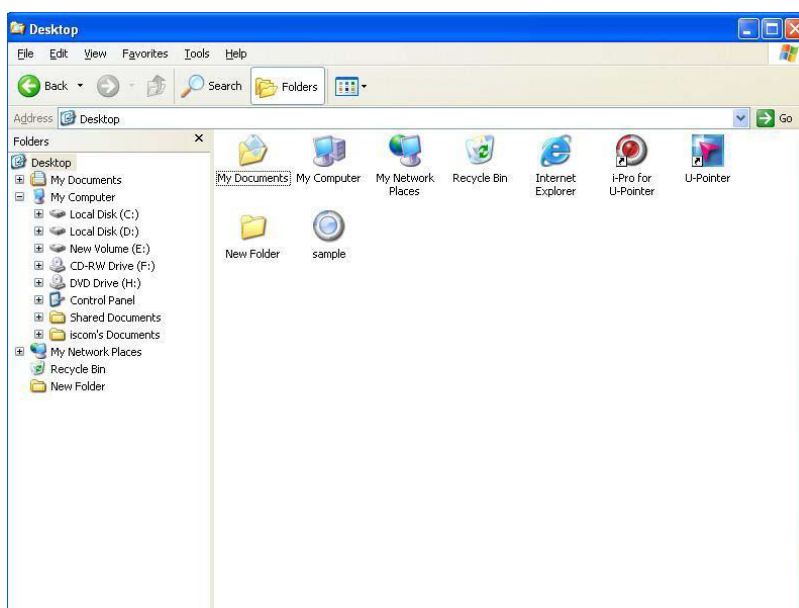

d) To open the presentation, you can use windows search function or open menu of i-Pro. When using windows search function, search presentation file in the folder and double click it. When using Open menu of i-Pro, click 'Open' menu. Select file and click 'Open' button. Refer to Chapter 5. [F-1](#).


2. Save As menu of i-Pro will support you to save current presentation with another name.

3. To start new presentation after finishing current presentation, click 'New Presentation' menu and proceeds a new presentation. Refer to Chpater5. [F-1](#). Before new presentation is initiated, Dialog box that asks whether to save former presentation or not. Click 'Yes' or 'No'.

F) OBJECT

 
Clipart or your drawings can be treated as objects so you can adjust size, rotate, drag as you want.

a) To switch to Object Control Mode, click 'Object control menu' of toolbar. Refer to Chanpter 5. [D-2](#). and [E-12](#).


b) After entering Object Control Mode () the background color of menu is changed and the cursor shape changes ().

c) Click the object you want to reshape; supporting lines around the selected object appears like Power Point Object. In this state, you can reshape the object.


d) The below is sample image for showing reshape object. The original shape of cup is change in this mode.

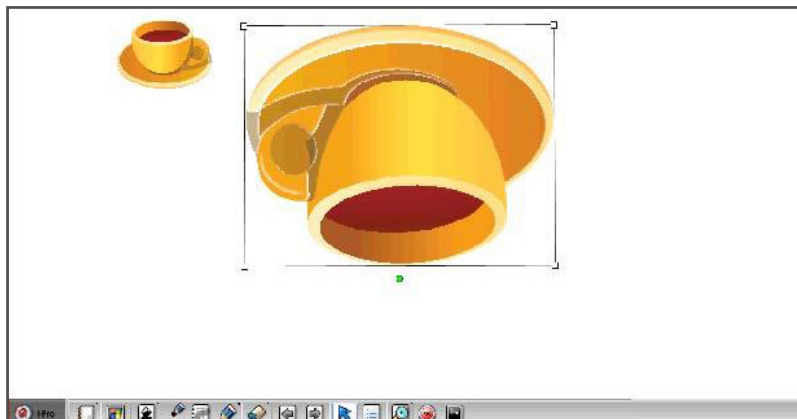

 e) If you want to treat number of objects at the same time, like Power Point, drag some area in which target objects are included and reshape them. Several objects are selected at once.

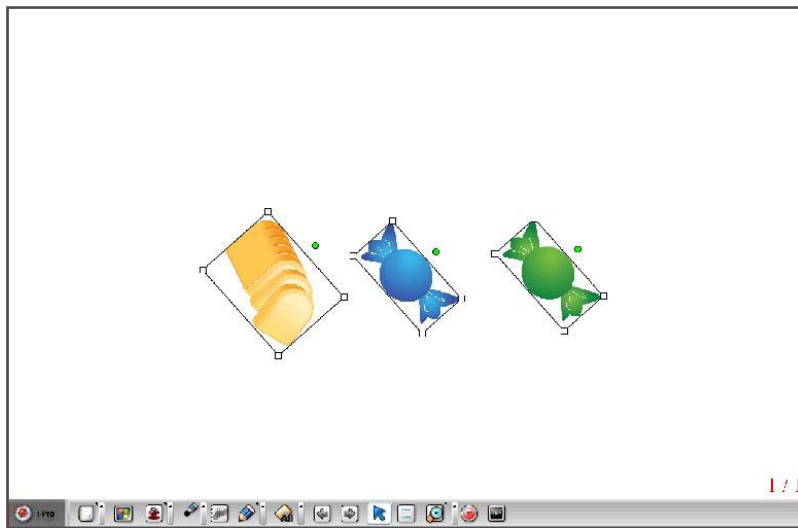

 f) i-Pro provides object control popup menu. Click right button on the selected object area. Popup menu is appeared and control the objects.

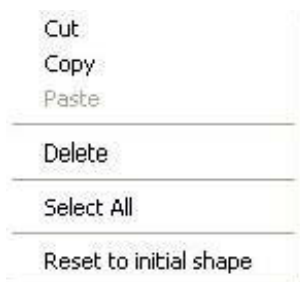

Cut: Cut a selected object

Copy: Copy a selected to

Paste: Paste an object copied or cut

Delete: Delete selected object


Select all: Select all objects in current note

Reset to initial shape: Reset the selected object to initial shape


G) USE AN ERASER FUNCTION

1. i-Pro provides three types of eraser. Erase All, Erase Object, Erase Region


a) Erase all

Click 'Erase all' button (). All clip art and writings are erased but background is not. Refer to Chapter 5. [D-8.](#), [E-7.](#)

 
b) Erase object

Click 'Erase object' () and click clipart or drawing on the note. The clipart or drawings will be erased respectively. Refer to [Chapter 5. D-8.](#), [E-7.](#) Refer to [Chapter 6. F](#) to select objects.

c) Erase region

Click 'Erase region' () and drag region in which clipart and drawings to be erased are included.

When click 'Erase region' and then shape of mouse cursor becomes cross. If dragged a region, the selected region is displayed as dotted rectangular. After dragging, all the objects in the rectangular are disappeared at once.

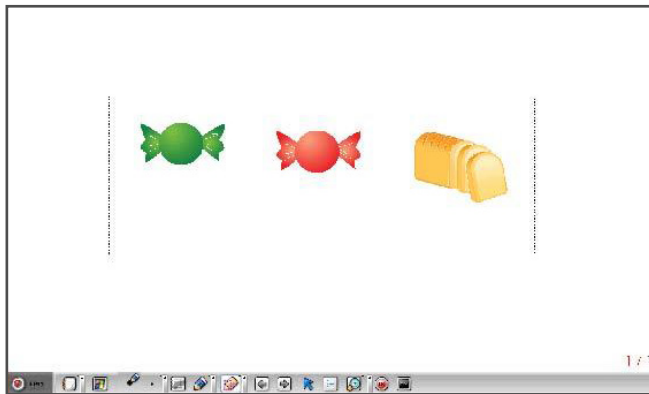

d) Erase by object menu

As explained in [F-1.](#), objects can be erased by clicking delete function in object menu.

CHAPTER 7. EXTRA FUNCTIONS

i-Pro provides several functions to increase efficiencies during your presentation.

A) VIRTUAL KEYBOARD

 
1. In some cases, you may need to input letters by means of keyboard during you use U-Pointer/U-Vision. In this case, you can input letters using virtual keyboard that will appear on window.
2. Click virtual keyboard submenu in main menu of i-Pro. The virtual keyboard will be appeared on the window. Input letters by pressing virtual keyboard. Refer to [Chapter5. D-1., E-1.](#)

Virtual keyboard is activated.




B) SPOTLIGHT


1. To attract audience's attention, emphasizing a target part of a note is necessary. A Spotlight function is provided in i-Pro.
2. Spotlight function is activated by selecting 'Spotlight' function in Tool of main menu. Refer to [Chapter 5. D-1.](#) and [E-1.](#)

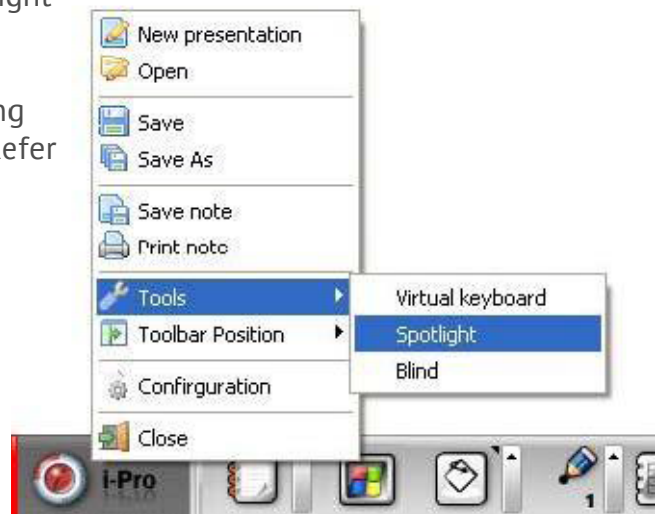

 3. After Spotlight function is activated, color of note area becomes transparent dark gray and spotlight will appear. You can move the spotlight by dragging with U-Pointer/U-Vision Pen.

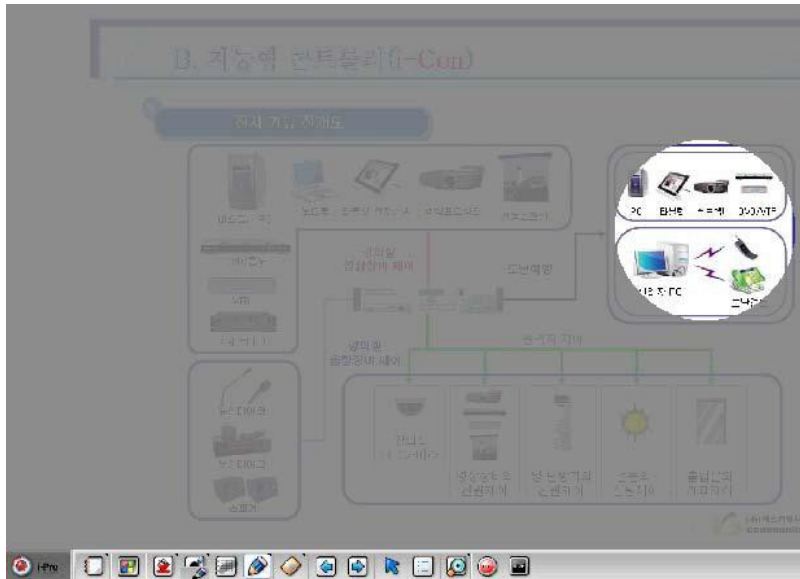

 4. After the Spotlight function is activated, Spotlight control and closing box will appear on right upper corner of note.

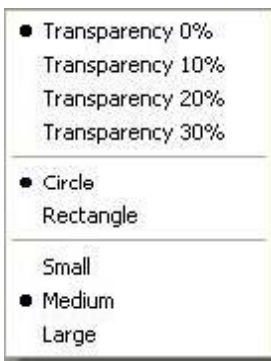

Transparency 0%: 0% transparency of gray screen

Transparency 10%: 10% transparency of gray screen

Transparency 20%: 20% transparency of gray screen

Transparency 30%: 30% transparency of gray screen

Circle: Spot light shape to be circle

Rectangular: spotlight shape to be rectangular

 
Small size: small size of spotlight

Middle size: middle size of spotlight


Large size: large size of spotlight

C) BLIND

1. Like a blind in the glass window, Blind of i-Pro blinds all screen area and open by dragging from side of window so that part of note is exposed. You can open note from any side of windows frame.
2. Click Blind function in Tools menu in main menu of i-Pro. And then all note is blinded and closing button will appear on right upper corner. Refer to [Chapter 5. D-1.](#) and [E-1.](#)

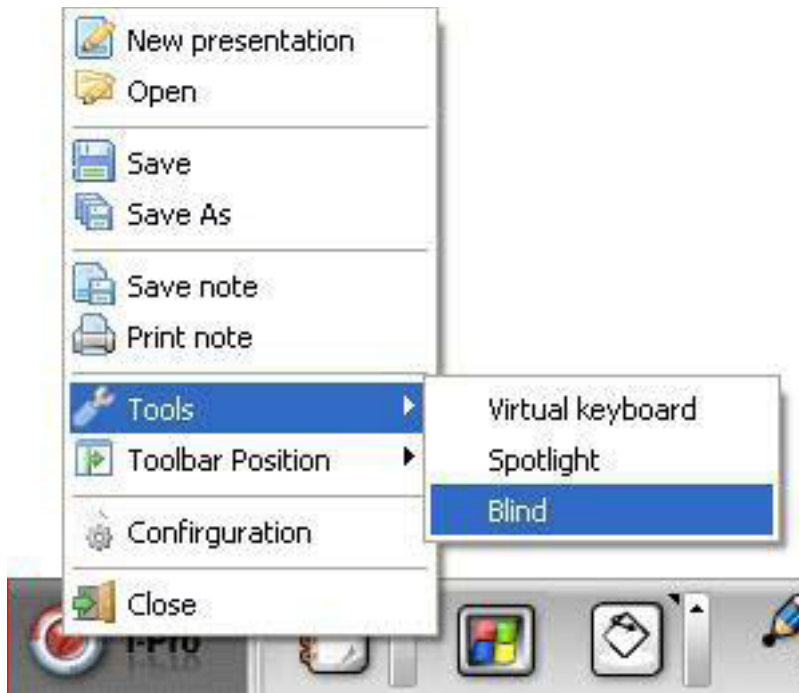

 
3. Place cursor to any edge of note frame, and then cursor image becomes both end arrow line. In this state, drag cursor. Note will be opened according to dragging.

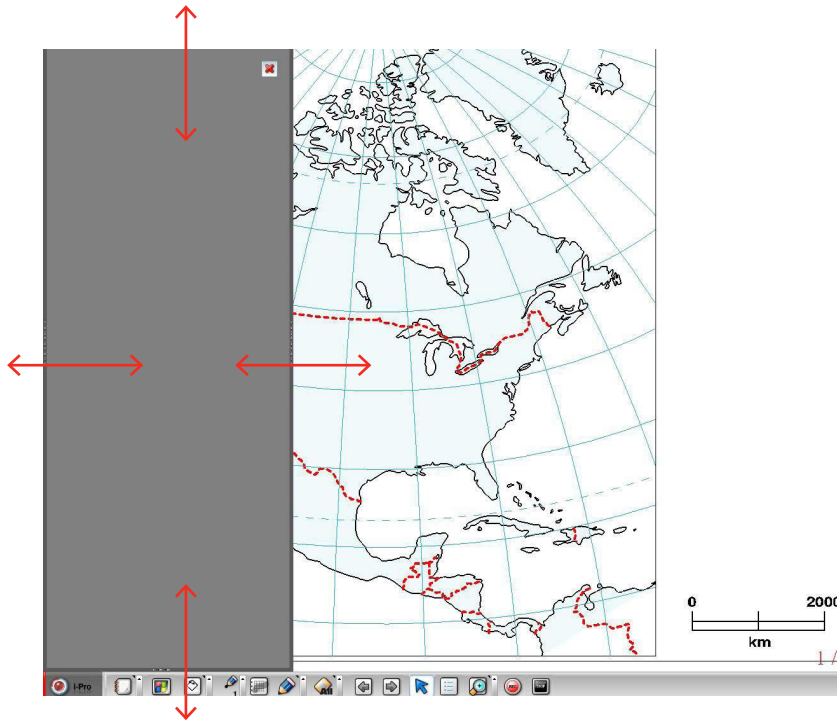

CHAPTER 8. CONFIGURATIONS


A) FOLDER

 After i-Pro is installed in your PC, default folder to save note and presentation is 'i-Pro Prj' folder created under 'IScom/i-Pro' directory. To change this folder, use Folder configuration. In the dialog box, click 'folder' and designate folder in your preference.

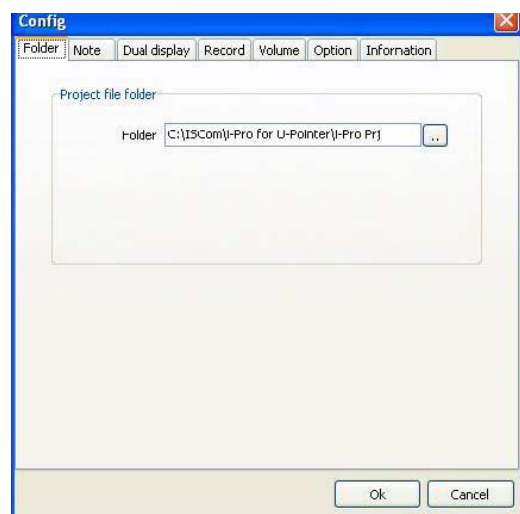


B) NOTE

 1. Background of color of new note is changed by this function. Click 'note' and change color. Default color of note is white.

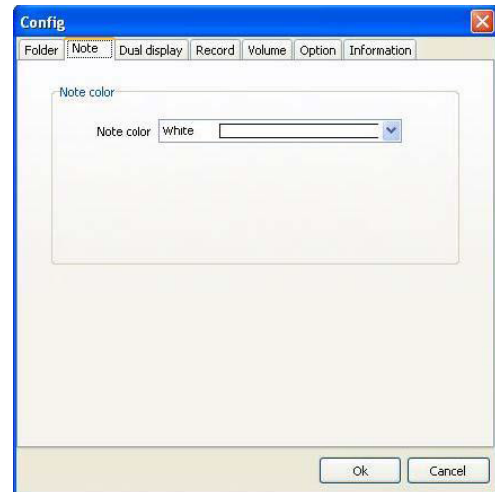

C) DUAL DISPLAY

 1. To use extended display, dual display should be selected. Dual Display mode enables you to use two wide range of writing area. To construct this mode, two display, two U-Pointer/U-Vision are needed. Ask your U-Pointer/U-Vision dealer for more information.

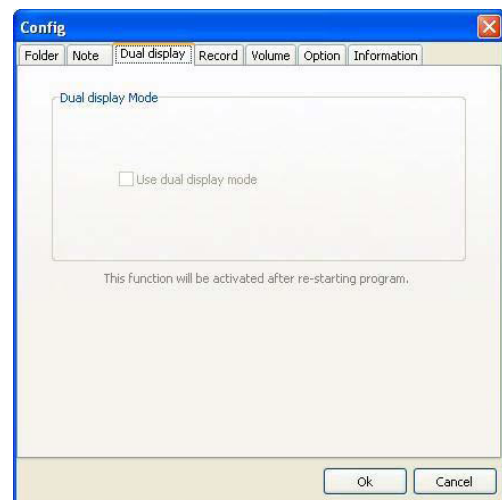


D) RECORDING

1. For accurate recording operation, you can set attributes of recording function.

Default folder for saving presentation is i-Pro Contents folder under ISCom folder in root directory. To change folder, designate folder in the dialog box.

 If you want to designate file name before recording, select 'Ask File Name before Recording'. If you check 'Confirm message before recording', confirm dialog box appear before recording.

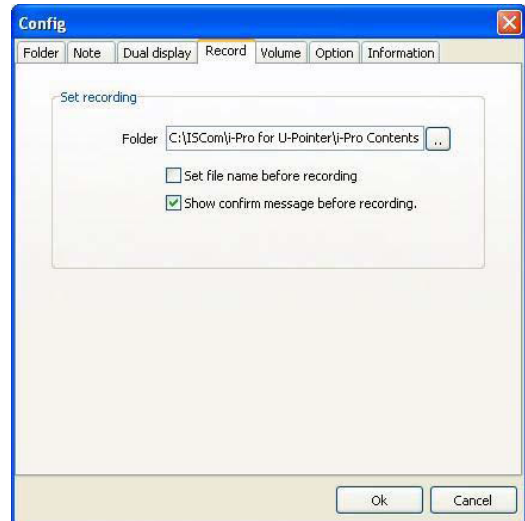

2. Document Importing Window

You can select to show or not the 'How to Import' window.

3. Select Language

i-Pro supports 25 languages. If you want to change the language, please, click language selection on Main Menu/Configuration/Option/Select Language. Then, please, select the language on the pop up dialog you wish. After that, when you restart i-Pro, the language will be changed.

E) VOLUME

Mic and Speaker volume are set in this configuration. Slide volume on sound by dragging slide bar.



F) OPTION

 
Two options are provided in the option menu.

1. Confirm message at 'Erase All': to prevent your mistake, confirm message box will appear when you click 'Erase All'.

2. Set Toolbar location
You can place toolbar in 5 ways. Select toolbar position according to your preference. This toolbar position is saved when you check 'Storing Toolbar' position when i-Pro is finished.

3. Document Importing Window
You can select to show or not the 'How to Import' window.

4. Select Language
i-Pro supports 25 languages. If you want to change the language, pls. click language selection on Main Menu/Configuration/Option/Select Language. Then, please, select the language on the pop up dialog you wish. After that, when you restart i-Pro, the language will be changed.

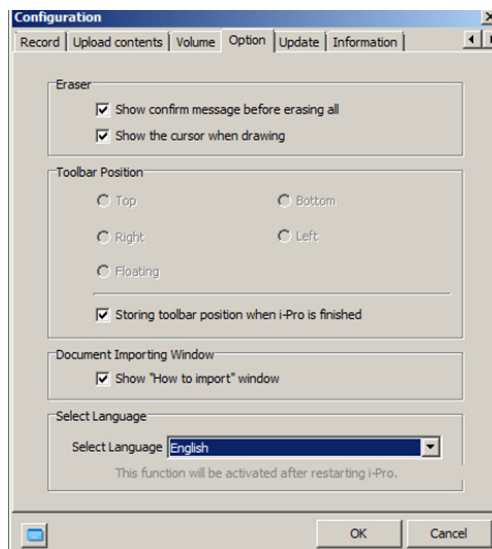

G) VERSION INFORMATION

In the information dialog box, you can check i-Pro version information. If the version is not the last version, click 'Update' button.




CHAPTER 9. UNINSTALL I-PRO


A) UNINSTALL I-PRO USING WINDOWS PROGRAM MENU

In the programs menu of Windows, you can find ISCom folder. Click ISCom folder and i-Pro folder consecutively, you can find 'Uninstall i-Pro' menu. Click it to uninstall i-Pro.

 Notice: Windows Media Encoder provided by Microsoft should be installed to your computer to use recording function of i-Pro

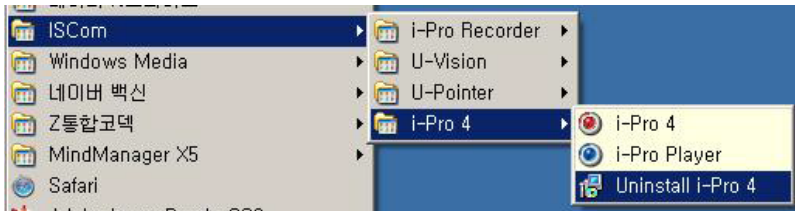

 B) UNINSTALL I-PRO USING CONTROL PANEL OF WINDOWS

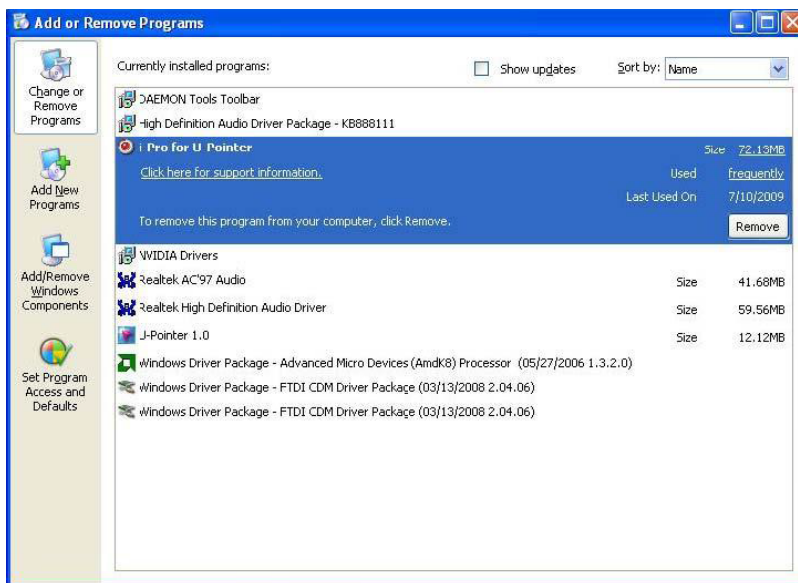

Run 'Program Add/delete' in the 'Program Add/delete' in Windows Control Panel. Select i-Pro and click 'Delete'

CHAPTER 10. NOTICE

Copyright © ISCommunicationsCo., Ltd. All Rights Reserved. The contents of this manual can be changed for product enhancement. Part of or all of this manual cannot be changed or transmitted to other parties without permission of Iscommunications.

Information of i-Pro

The late information and software is provided at the ISCommunications's website:

<http://www.iscom.co.kr> or <http://eng.iscom.co.kr>

TEL: +82-51-731-6601, +82-2-2688-6601

FAX: +82-51-731-6604, +82-2-2611-6604, 0303-0500-6601